



REF:

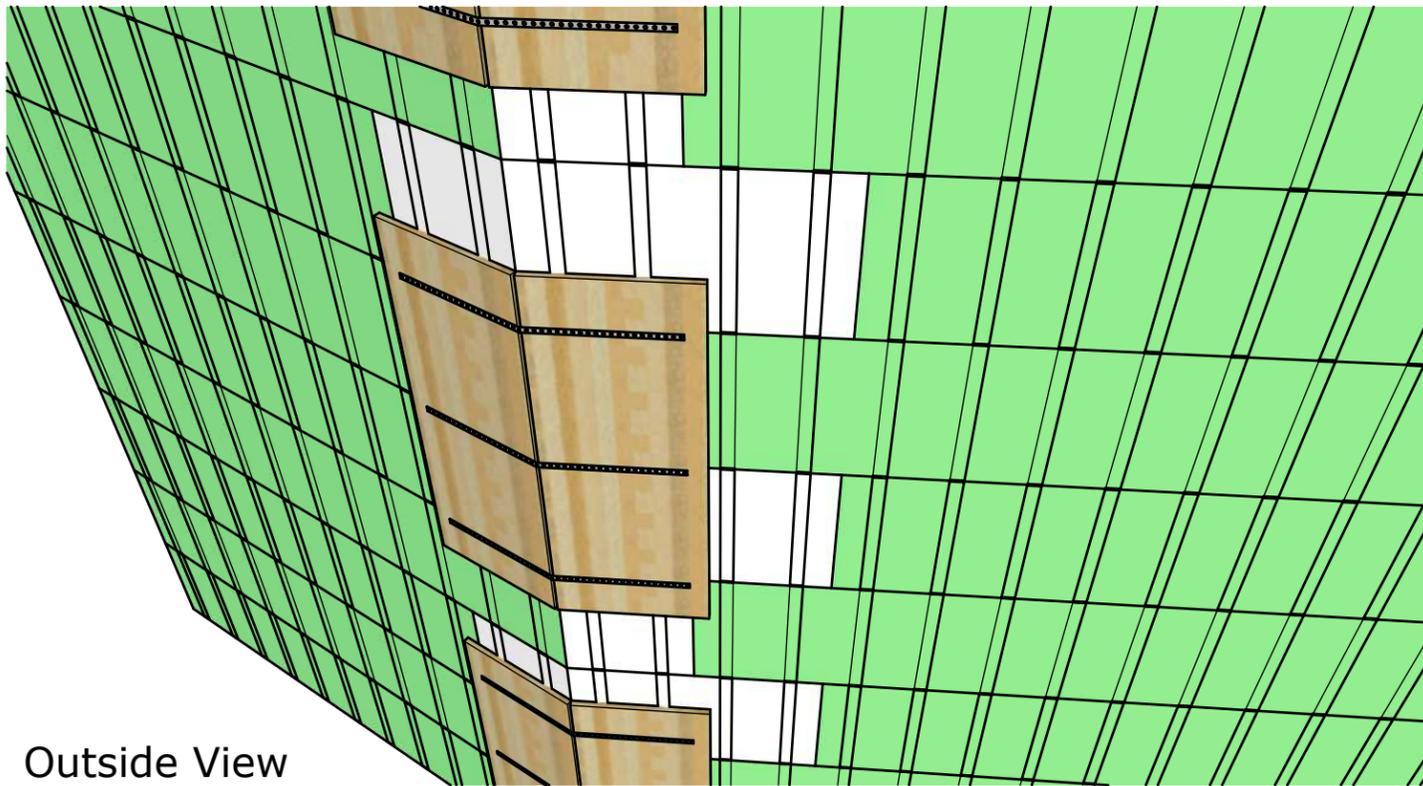


Outside View

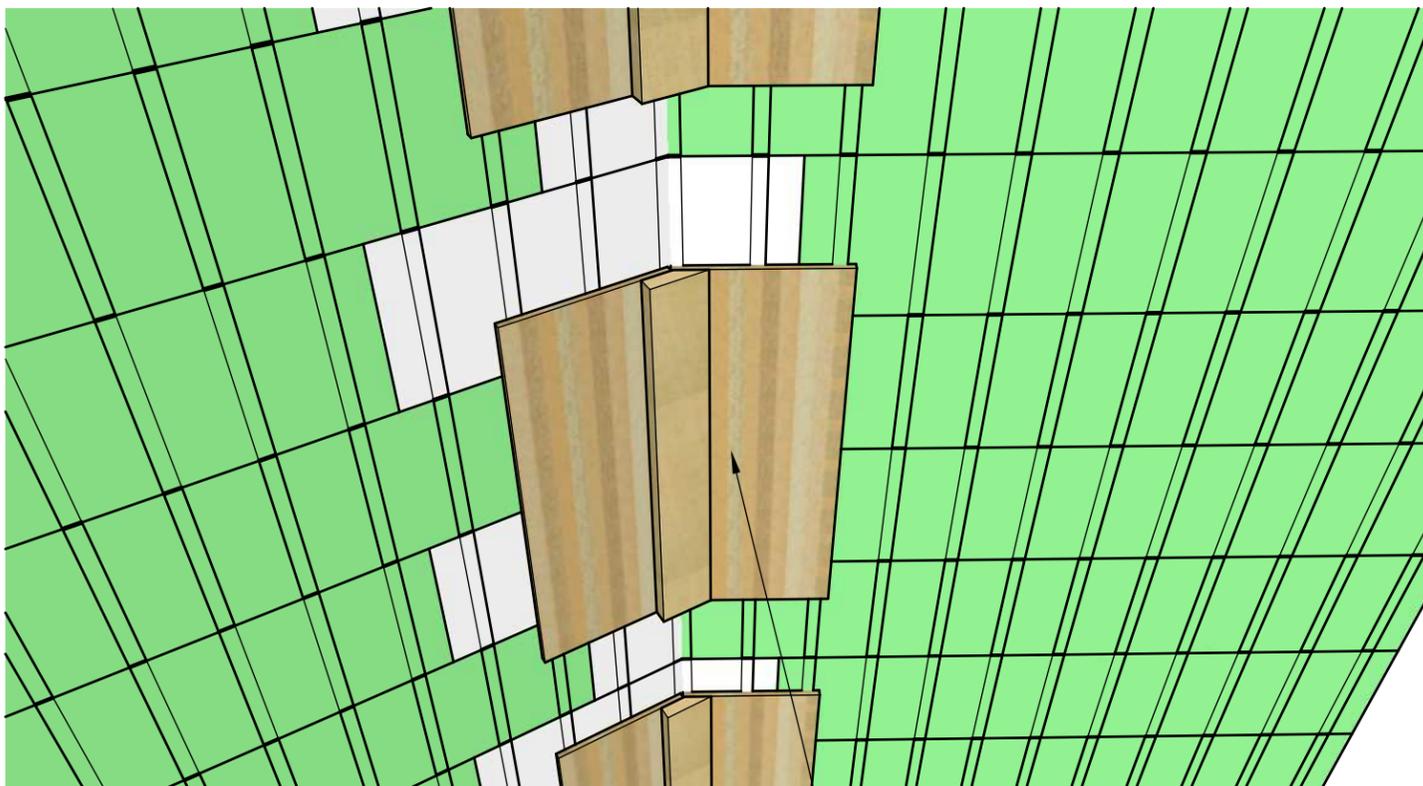


Inside View

4' high plywood gussets spaced over the height of wall so that no block is entirely unsupported

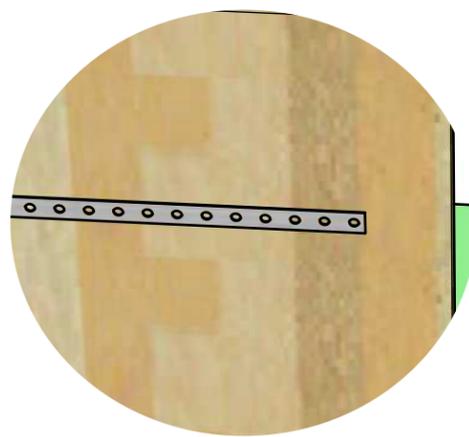

Metal Strapping

NOTE:
USE 2" #8 WOOD
DECK SCREW
TO AT LEAST TWO
WEBS EITHER
SIDE OF JOINT

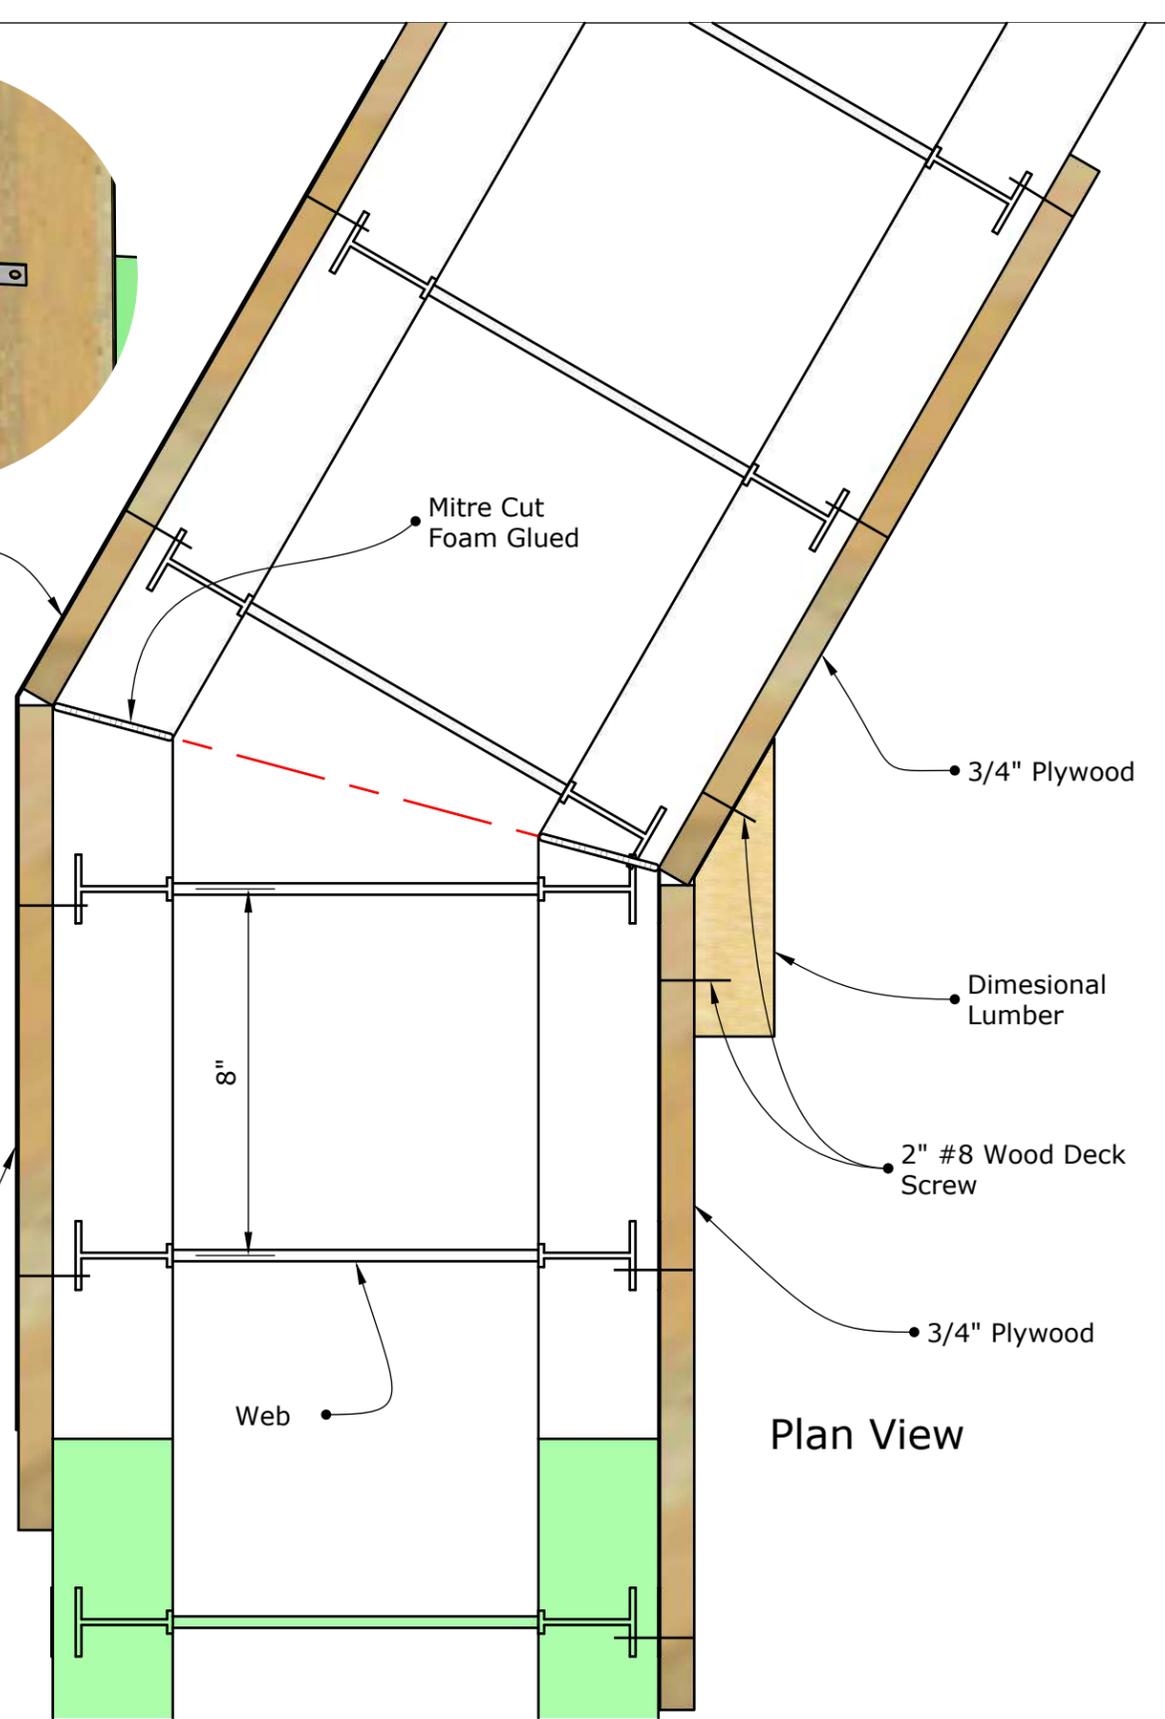

Plan View

Mitre Cut
Foam Glued

3/4" Plywood

Dimesional
Lumber

2" #8 Wood Deck
Screw

3/4" Plywood

8"

3/4" Plywood

Web

PROPRIETARY AND CONFIDENTIAL

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF FAB-FORM INDUSTRIES LTD. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF FAB-FORM INDUSTRIES IS PROHIBITED



www.vancouvericf.com

(604)229-9829

DRAWN: SFRG

CHECKED: RF

APPROVED: JF

DATE: February 22, 2019

REF:

Angled Wall Bracing.layout 2

TITLE:

Angled Wall Bracing
Typical Detail

DRG NO:

General Layout

REV:

2