
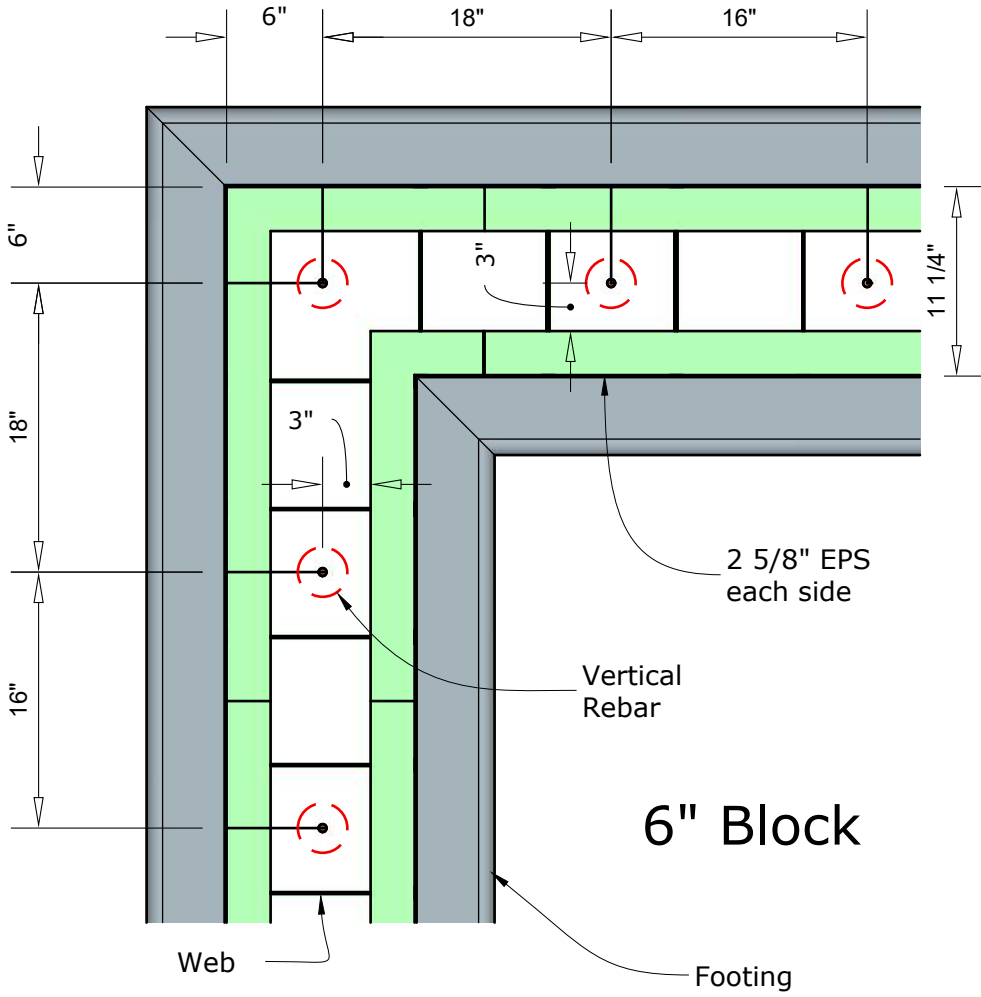


Advisory Only. Always Consult Your Structural Engineer Regarding Any Rebar Placement

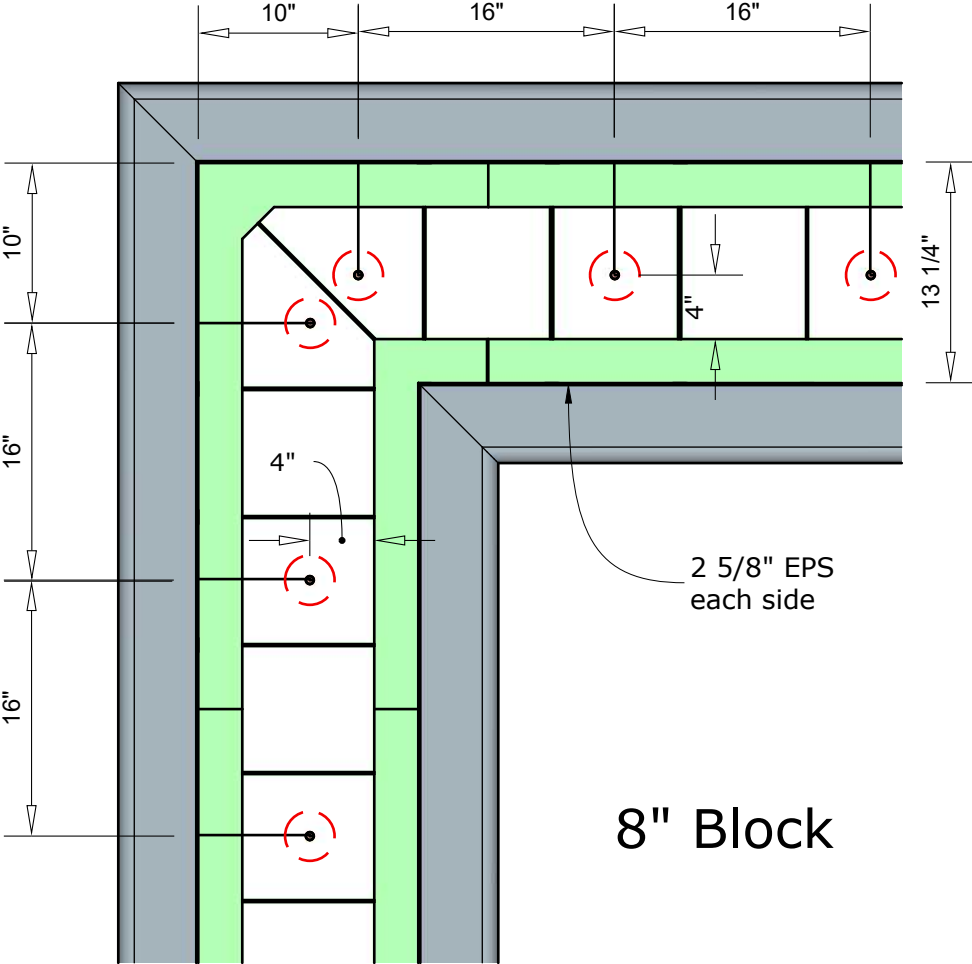

Note: Level footings are extremely important. Use laser when screeding footing concrete