

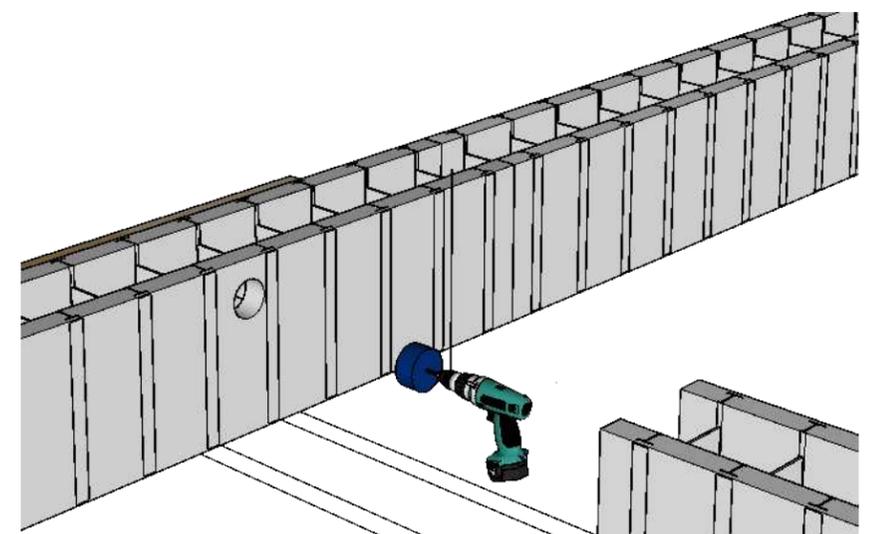


REF: Fab-Form ICF Butt w Zee installation 2" x 4" (on flat) 18" O.C. vertically with additional bracing as required near bottom

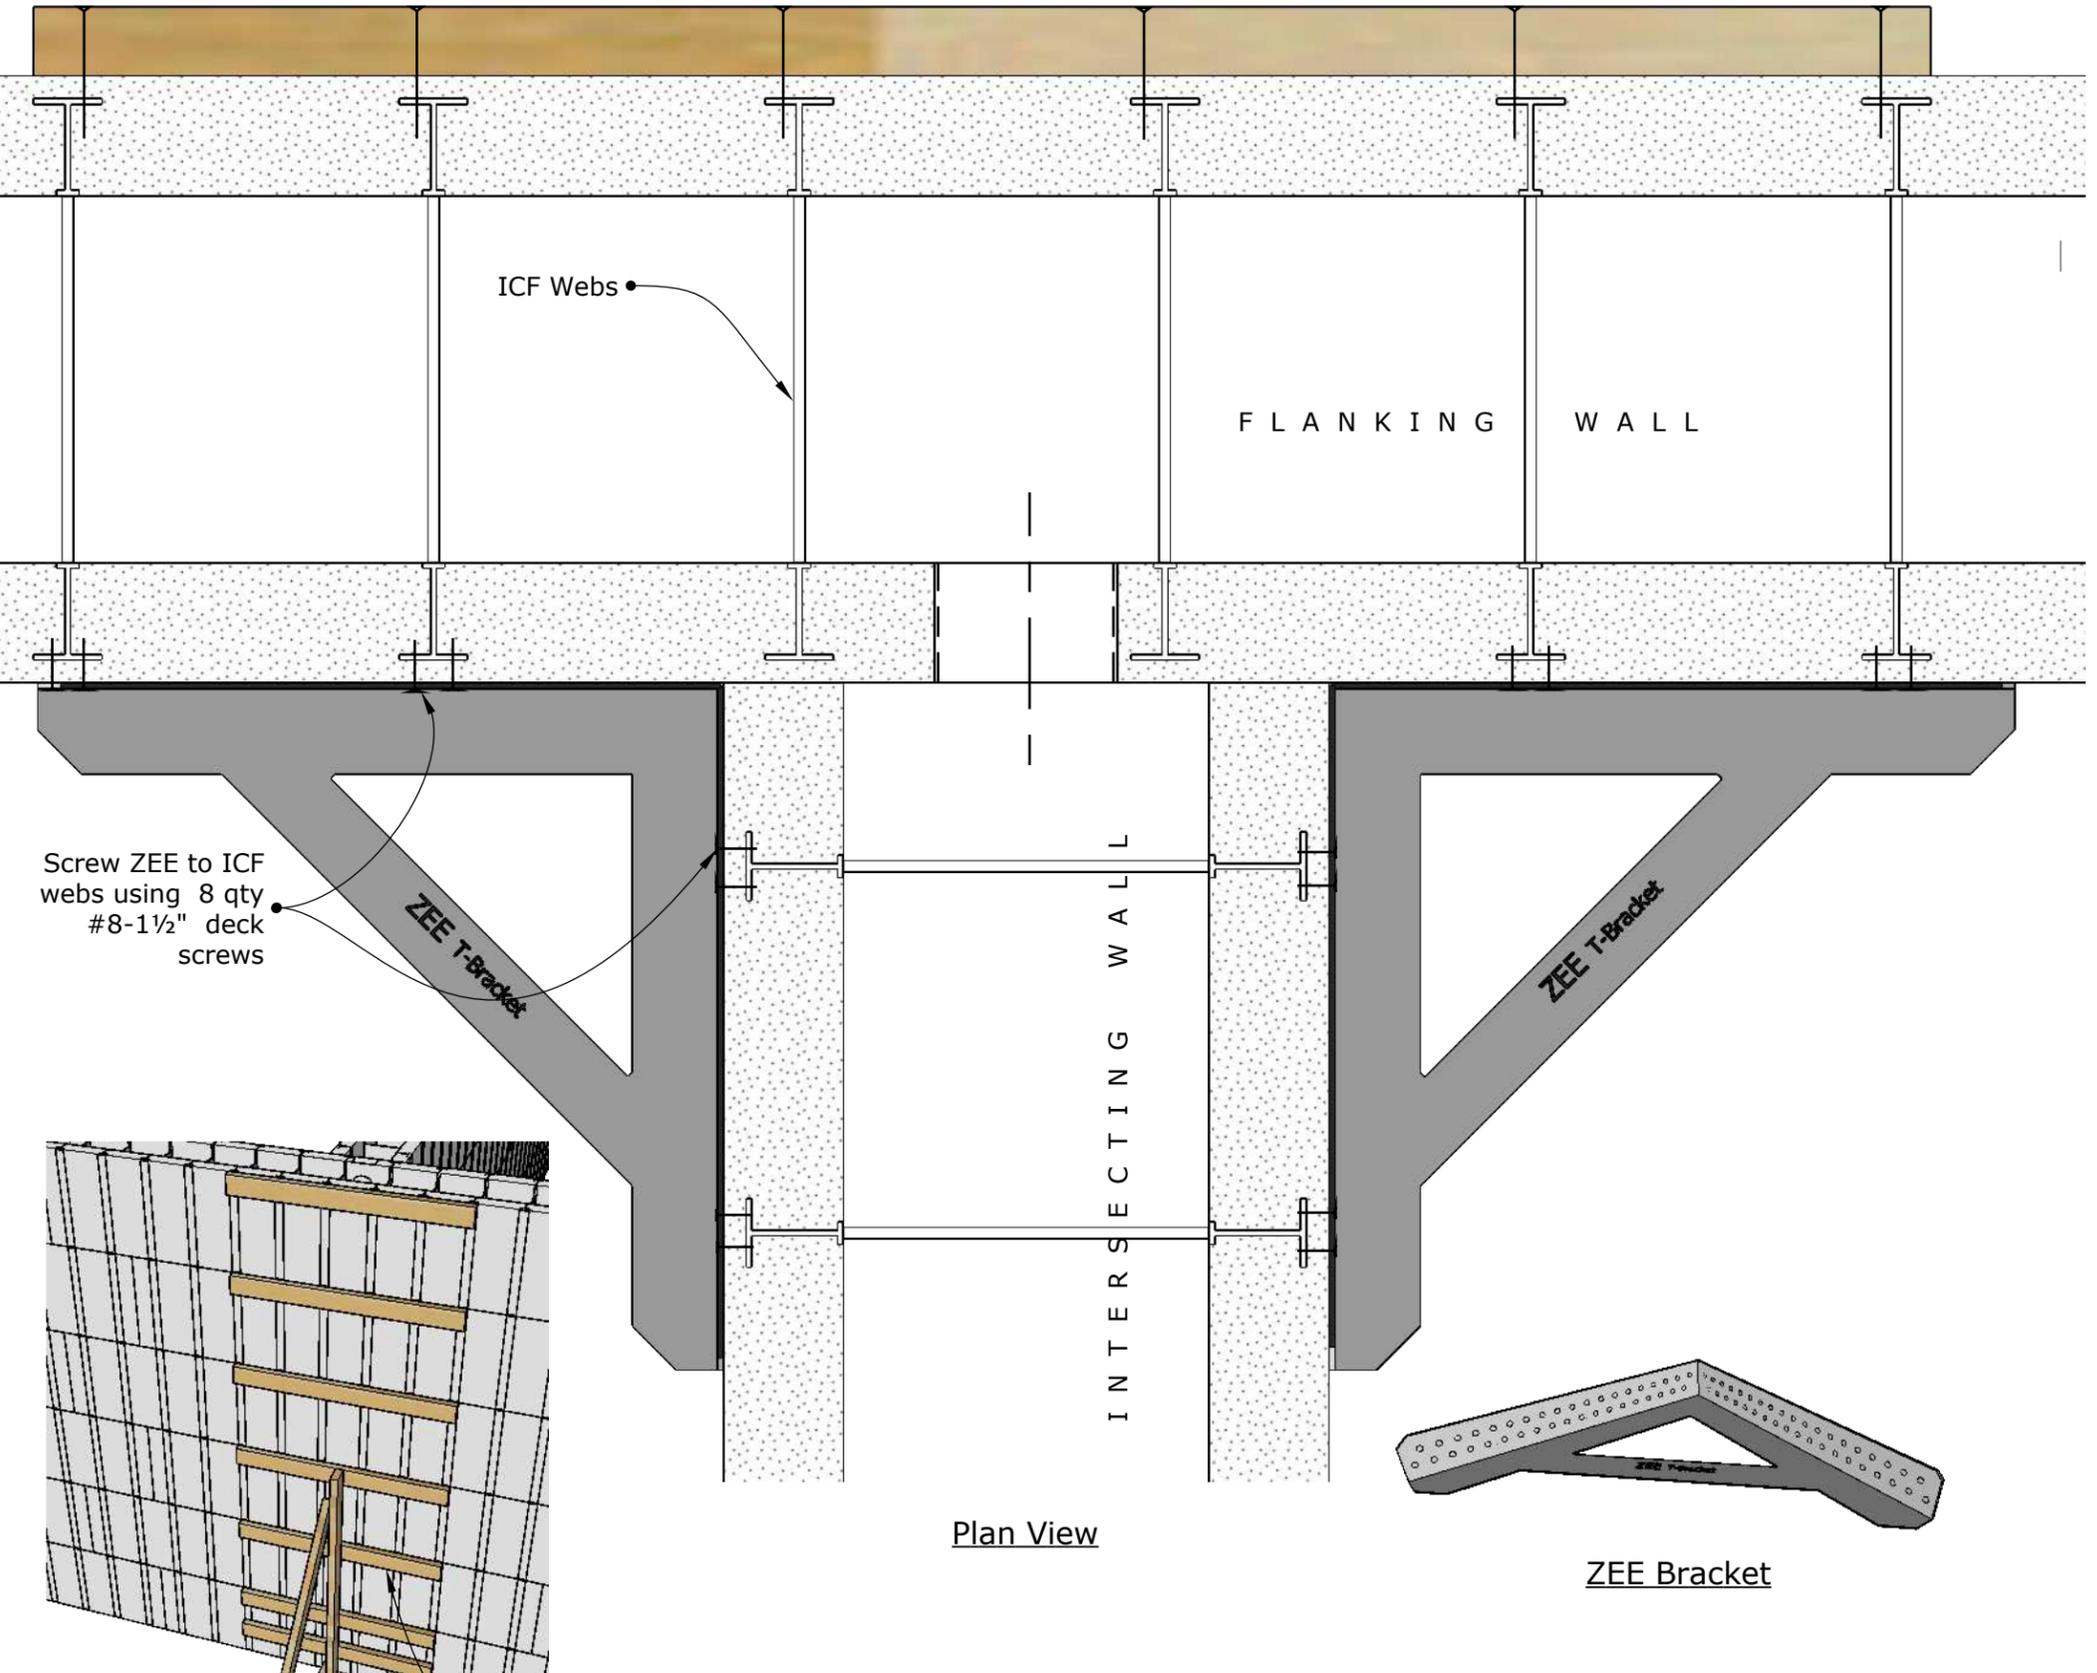

- 1 Measure & mark intersecting wall location
- 2 Drill 4" holes at rebar heights or remove full foam @ cavity (as specified by engineer)

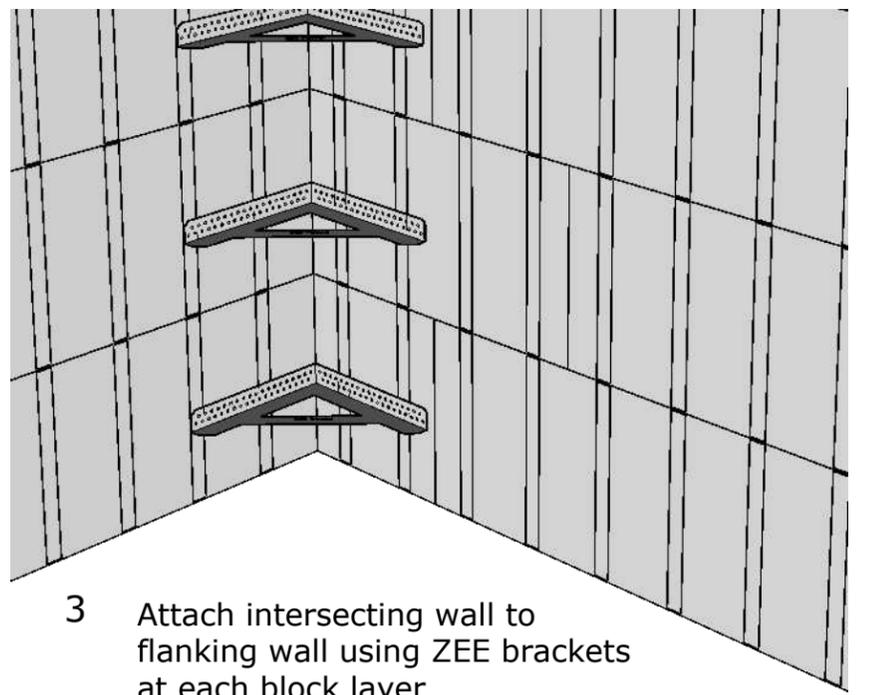

- 3 Attach intersecting wall to flanking wall using ZEE brackets at each block layer

Plan View

ZEE Bracket

Reverse View

PROPRIETARY AND CONFIDENTIAL
 THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF FAB-FORM INDUSTRIES LTD. ANY REPRODUCTION IN PART OR AS A WHOLE WITHOUT THE WRITTEN PERMISSION OF FAB-FORM INDUSTRIES IS PROHIBITED

FAB-FORM INDUSTRIES LTD.

www.fab-form.com (888)303-3278

DRAWN: SFRG	CHECKED: RF	APPROVED: JF
DO NOT SCALE DRAWING	WEIGHT:	DATE:

TITLE:
ZEE T-bracket

DRG NO: Installation	REV:
-------------------------	------

Strongback & kicker for first 3 courses on tall walls

2x4 strapping x 42" attached vertically 18" o.c. using #8-2 1/2 deck screws

Screw ZEE to ICF webs using 8 qty #8-1 1/2" deck screws