INTERNAL CORNERS

Cut 16" to 24" by full width strips.
Fold in half. Start at the bottom &
after removing the paper backing,
install, in shingle fashion up the wall.
Apply equally & evenly to both sides.
Make sure to apply into the corners to
no air pockets are left behind.

EXTERNAL CORNERS

Cut full width to height required.
Fold in half. Start at the top &
after removing the paper backing,
install, downwards.
Apply equally & evenly to both sides.
Make sure to apply into the corners to

no air pockets are left behind.

PEEL & STICK INSTALLATION


WORKING TEMPERATURE 2°-38° C (35°-100° F)

ALWAYS USE SCREWS NOT NAILS!

USE 2 PEOPLE.

INSTALL ONLY ON DRY SURFACES.
ENSURE FULL CONTACT WITH WALL SURFACE
BEHIND USING HAND OR PLASTIC ROLLER

After pouring concrete, use a garden hose to wash down ICF walls. ALLOW TO DRY BEFORE INSTALLING!

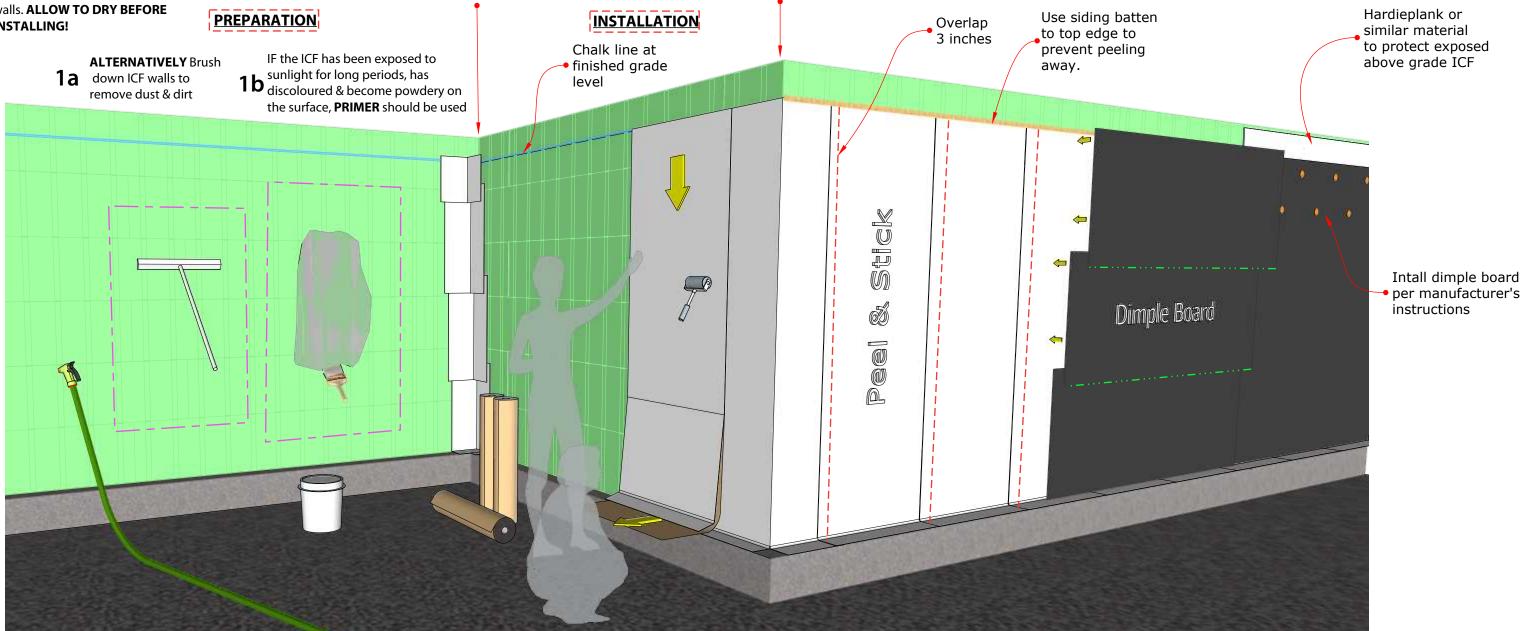

PEEL & STICK: Self-adhesive waterproofing membrane specifically for application to ICF.

<u>It is designed for below grade use only. It must not be used above grade</u>. Supplied in rolls, 36" wide. Coverage 225 sq ft, 210 sq ft net.

Care should be taken to protect Peel & Stick from moisture, dust & general wear & tear. Store rolls in a cool, dry location, not in direct ground contact and protect with a tarp to prevent exposure until ready to use

PROPRIETARY AND CONFIDENTIAL

THIS DRAWING IS FOR ESTIMATION PURPOSES ONLY - DO NOT USE FOR ANY OTHER REASON

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF FAB-FORM INDUSTRIES LTD

| www.vancouvericf.com | | | icf.com | ANCOUVA GE | |
|----------------------|--------|------|-------------|---------------|----|
| | DRAWN: | SFRG | CHECKED: DX | APPROVED: JF | DA |

(604)229-9829 DATE: 25 Feb 2025 **Exterior Finishing**

EF: Peel & Stick & Dimpleboard Installation Hybrid