PEEL & STICK INSTALLATION

After pouring concrete, use a **1** garden hose to wash down ICF walls. **ALLOW TO DRY**

INTERNAL CORNERS

Cut 16" to 24" by full width strips. Fold in half. Start at the bottom & after removing the paper backing, install, in shingle fashion up the wall. Apply equally & evenly to both sides. Make sure to apply into the corners to no air pockets are left behind.

EXTERNAL CORNERS


Cut full width to height required. Fold in half. Start at the top & after removing the paper backing, install, downwards. Apply equally & evenly to both sides.

Make sure to apply into the corners to no air pockets are left behind.

WORKING TEMPERATURE 2°-38° C (35°-100° F) ALWAYS USE SCREWS NOT NAILS! USE 2 PEOPLE.

INSTALL ONLY ON DRY SURFACES. ENSURE FULL CONTACT WITH WALL SURFACE BEHIND USING HAND OR PLASTIC ROLLER

The top edge of the membrane and where the membrane meets with the concrete footing must be sealed with a mastic/sealant

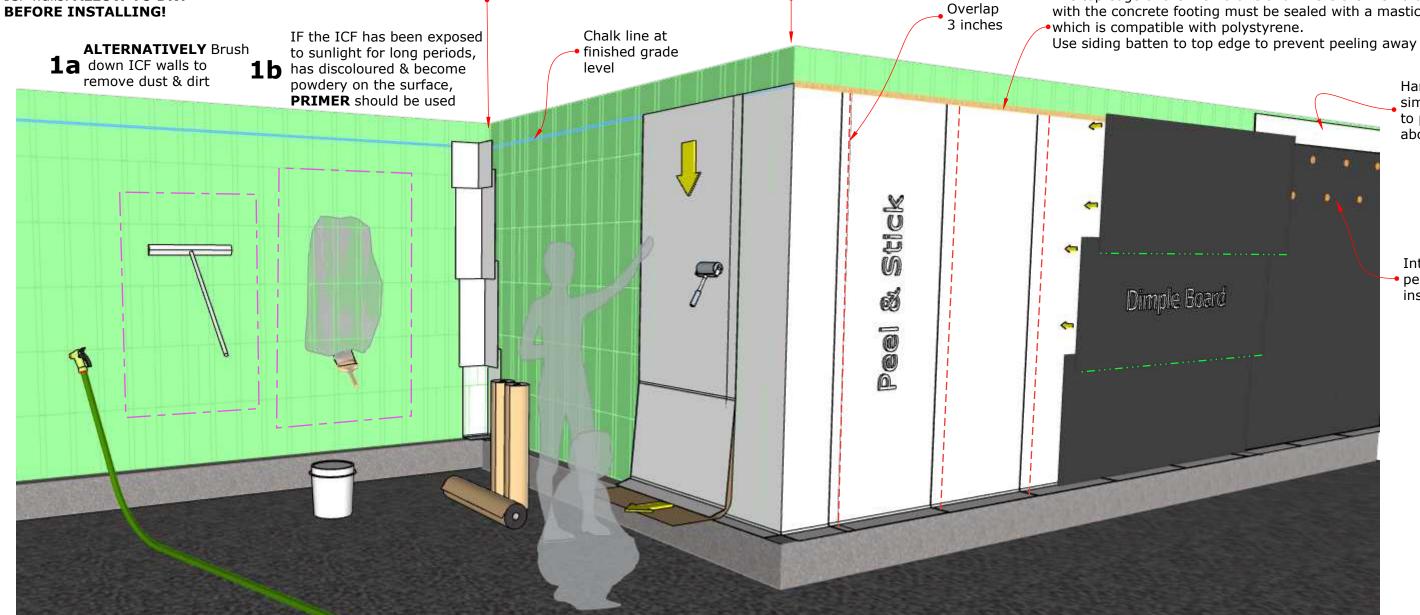

Intall dimple board per manufacturer's instructions

Hardieplank or

similar material to protect exposed above grade ICF

PEEL & STICK: Self-adhesive waterproofing membrane specifically for application to ICF. It is designed for below grade use only. Supplied in rolls, 36" wide. Coverage 225 sq ft, 210 sq ft net.

protect Peel & Stick from moisture, dust & general wear & tear. Store rolls in a cool, dry location, not in direct ground contact and protect with a tarp to prevent exposure until readv

PROPRIETARY AND CONFIDENTIAL

THIS DRAWING IS FOR ESTIMATION PURPOSES ONLY - DO NOT USE FOR ANY OTHER REASON

THE INFORMATION CONTAINED IN THIS DRAWING IS THE SOLE PROPERTY OF FAB-FORM INDUSTRIES LTD

www.vancouvericf.com

(604)229-9829 DRAWN: SFRG | CHECKED: DX | APPROVED: JF DATE: 16 Sep 2025

REF: Peel & Stick & Dimpleboard Installation Raster Damproofing Below Grade